

Never Done *MASTER GUIDE*



BRDG
BRIDGE STUDIOS


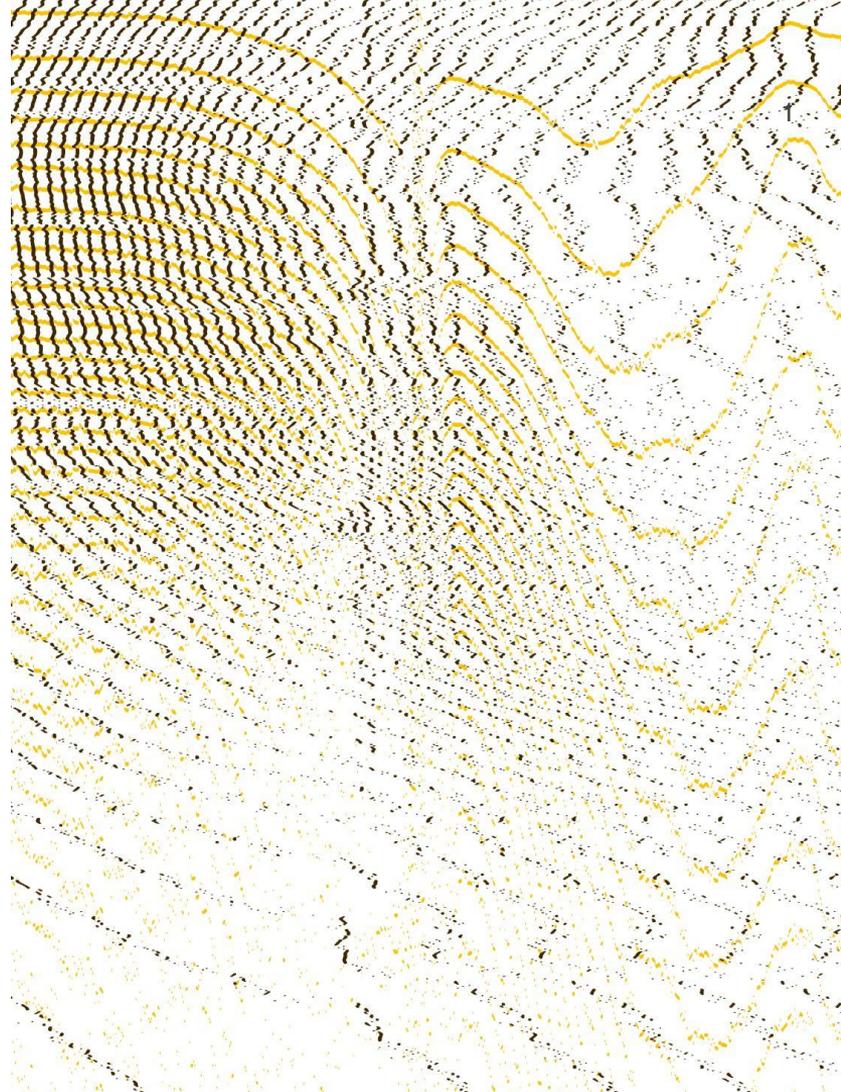


Table of Contents

— — —


HOI ROBOTICS	3 - 8
Overview	3 - 8
Restart	6
NFC Cards	7
Shirt Restocking	8
RECEIPT PRINTERS	9 - 10
ID PRINTERS	11 - 17
Changing Ink	12 - 13
Restocking ID cards	14
Printer Cleaning	15 - 16

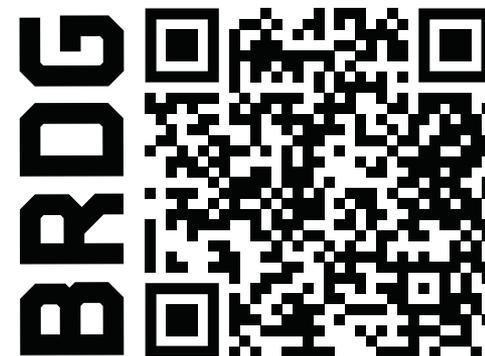


SCAN FOR GUIDE

support@brdg.co


1-844-999-2734

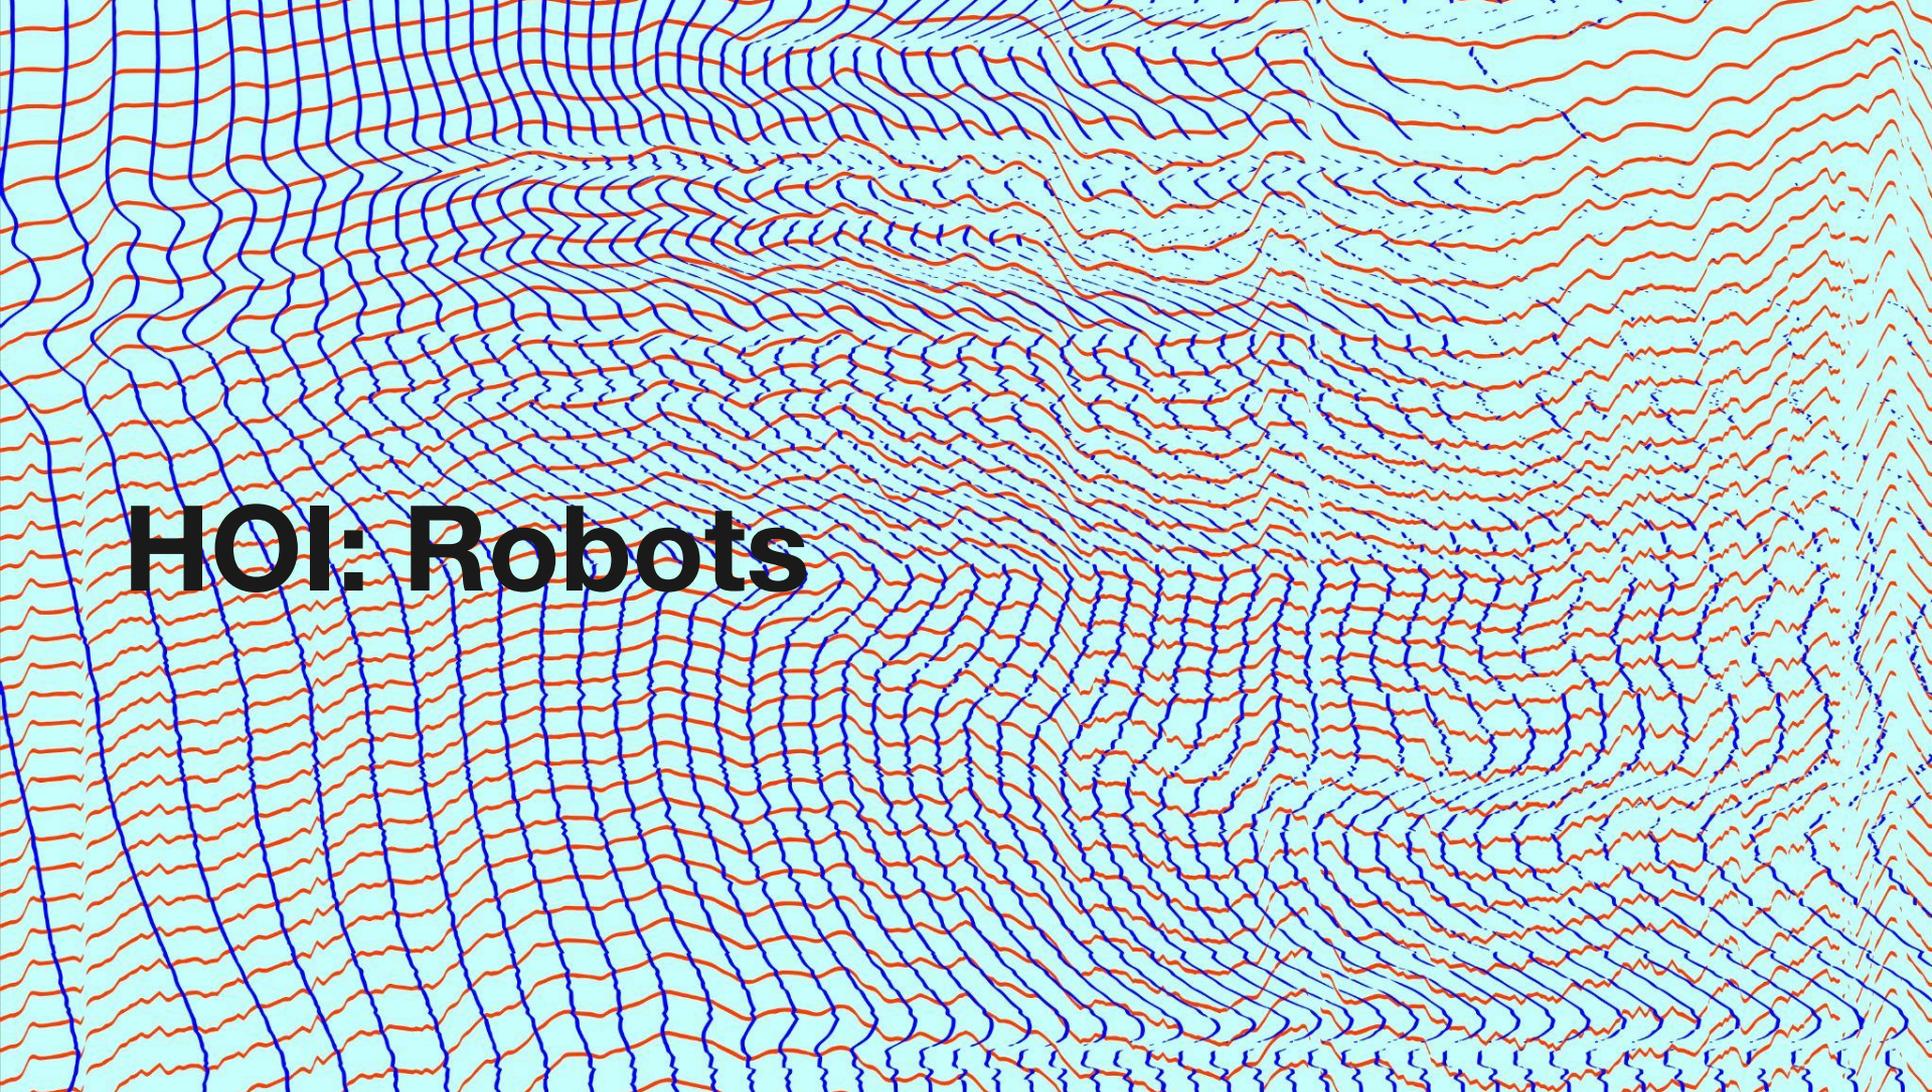

HOI: Robots

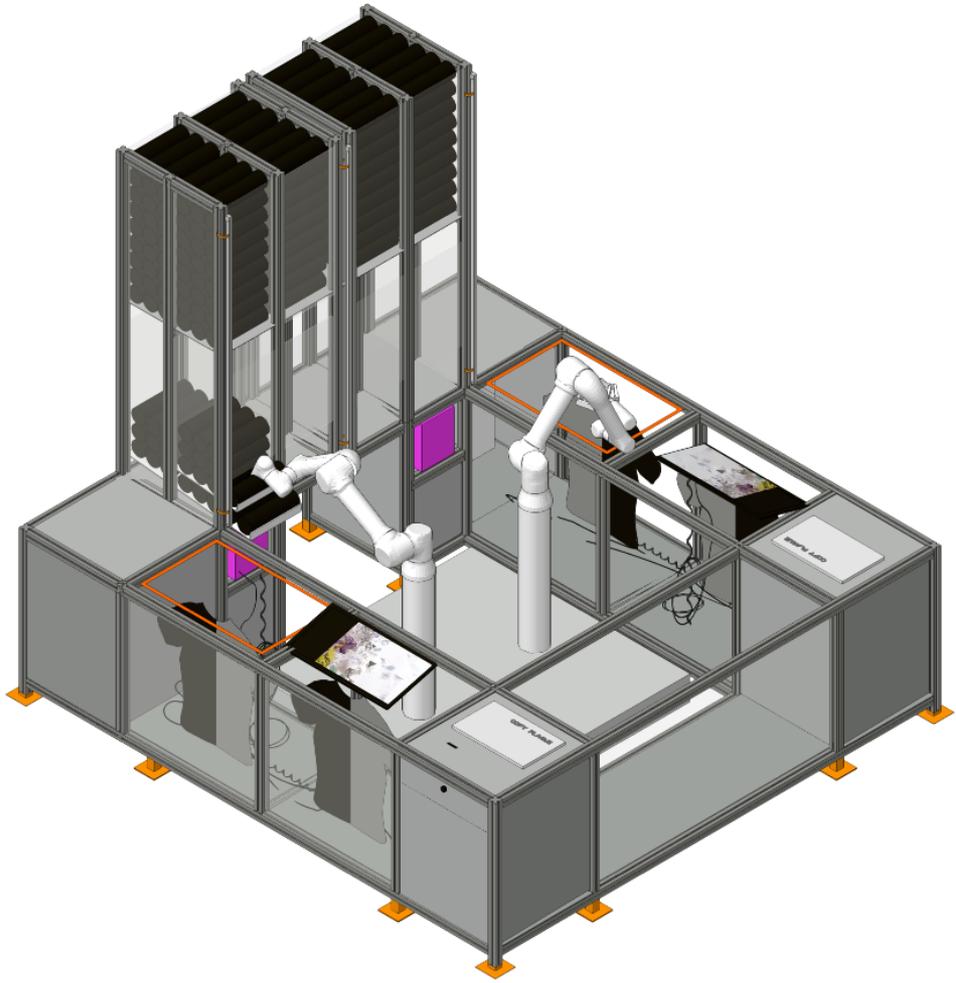

Layout

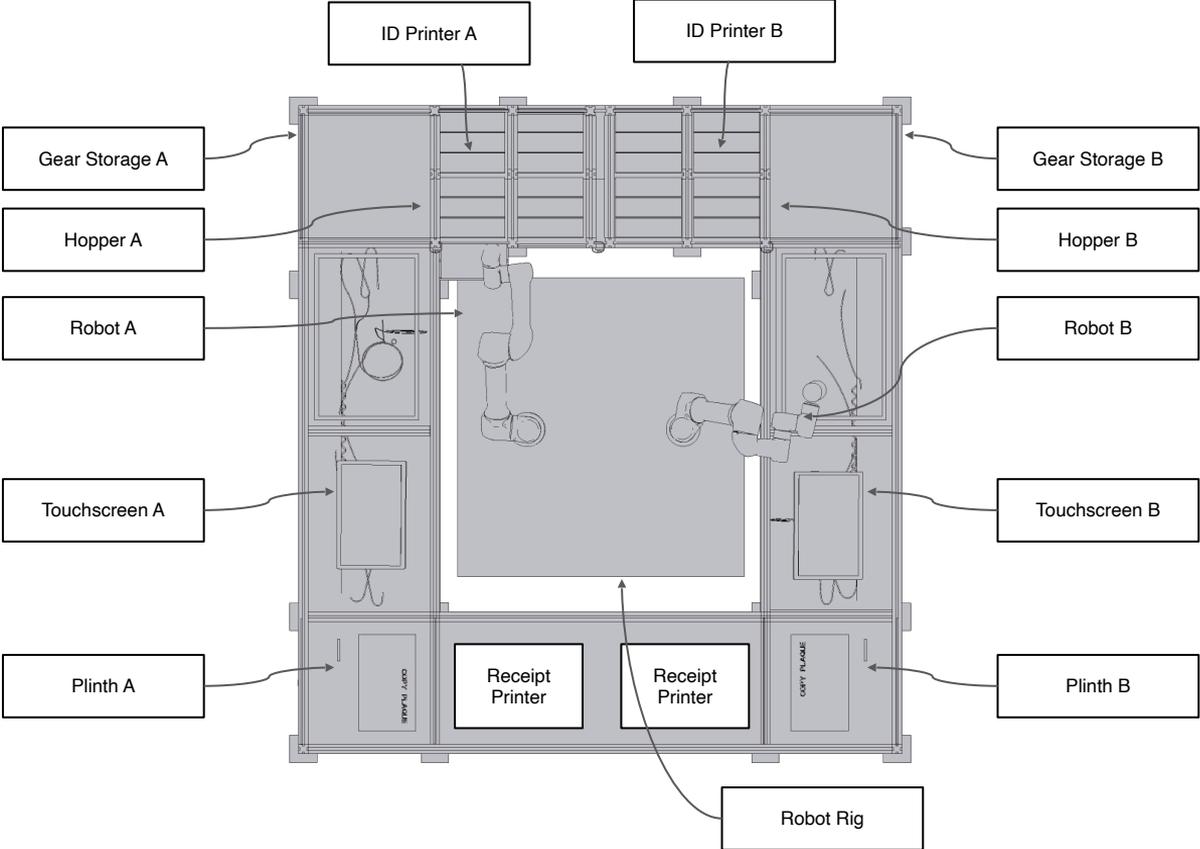

Robot Restart




Control keypad located in bottom right cabinet on back of unit.



Attached to right side of cabinet




Bottom buttons start and stop robots

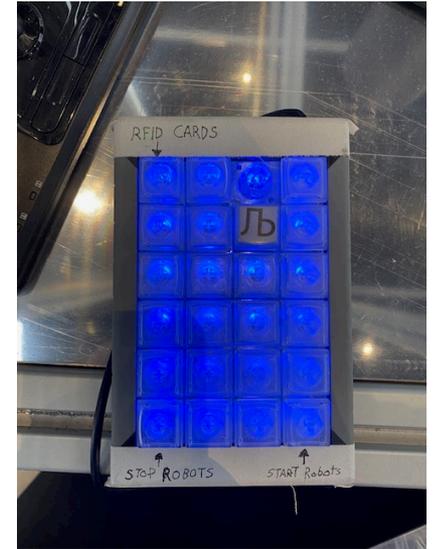

Press stop and then start to restart

NFC Card Reactivation

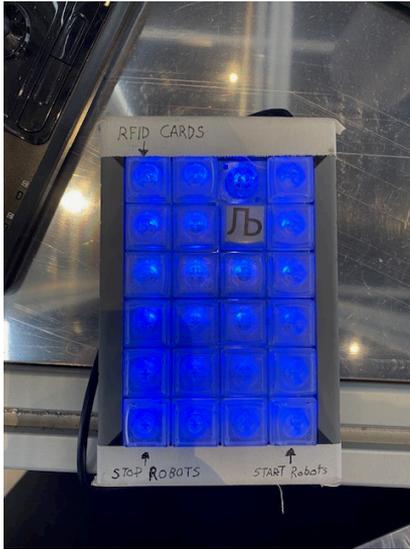


Press button labeled RFID cards to switch into reactivation mode.



Got to either screen.



Tap card on RFID reader to reactivate.

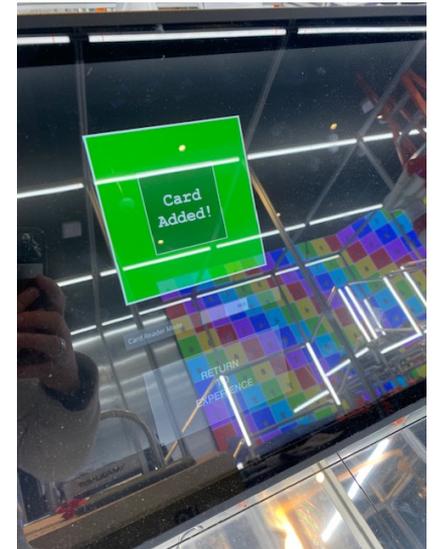

Once finished press "return to experience" on screen or wait for time out.


Shirt Hopper Restock



Back hoppers load from left to right - L, M, L, M



Always load back hoppers with removable side of the shirt tube facing left

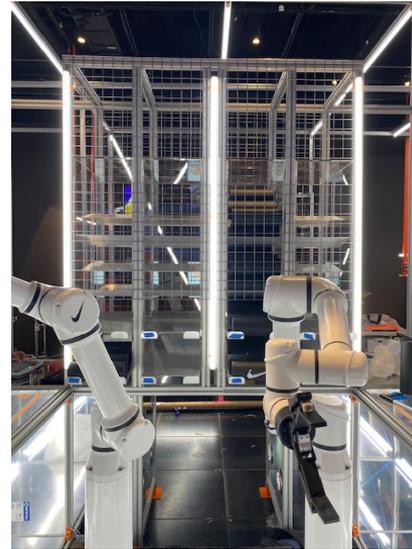

Front hoppers load from right to left - XL, S, XL, S




Always load front hoppers with removable side of shirt tube facing right




HOI: Receipt Printer


Receipt Printer Paper

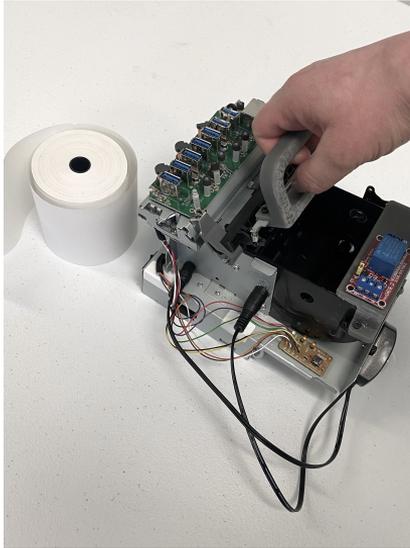


Remove top bracket by pulling handle up at a 45 degree angle...

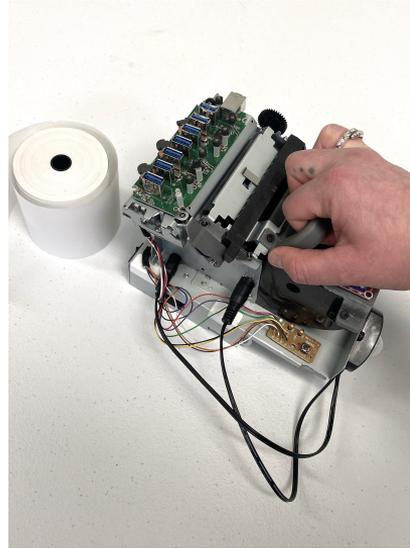


Then down at a 45 degree angle.

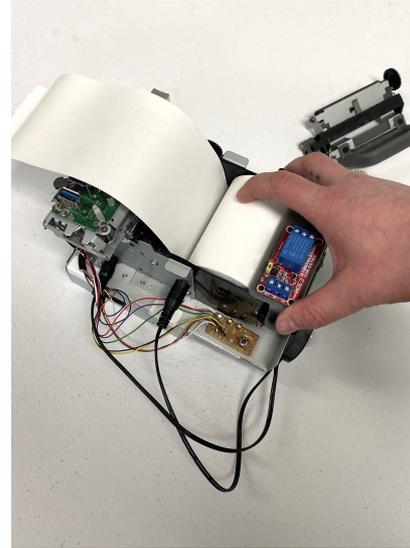

Be sure to remove old printer paper before placing paper into opening. May be a tight fit at first, unroll some paper if needed.

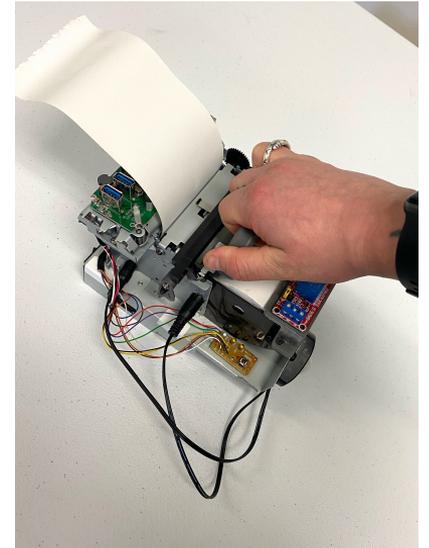

Replace bracket over top of paper by pushing it in from the top and then pulling back (reverse motion of taking it out). Make sure that the gears on the side are aligned.

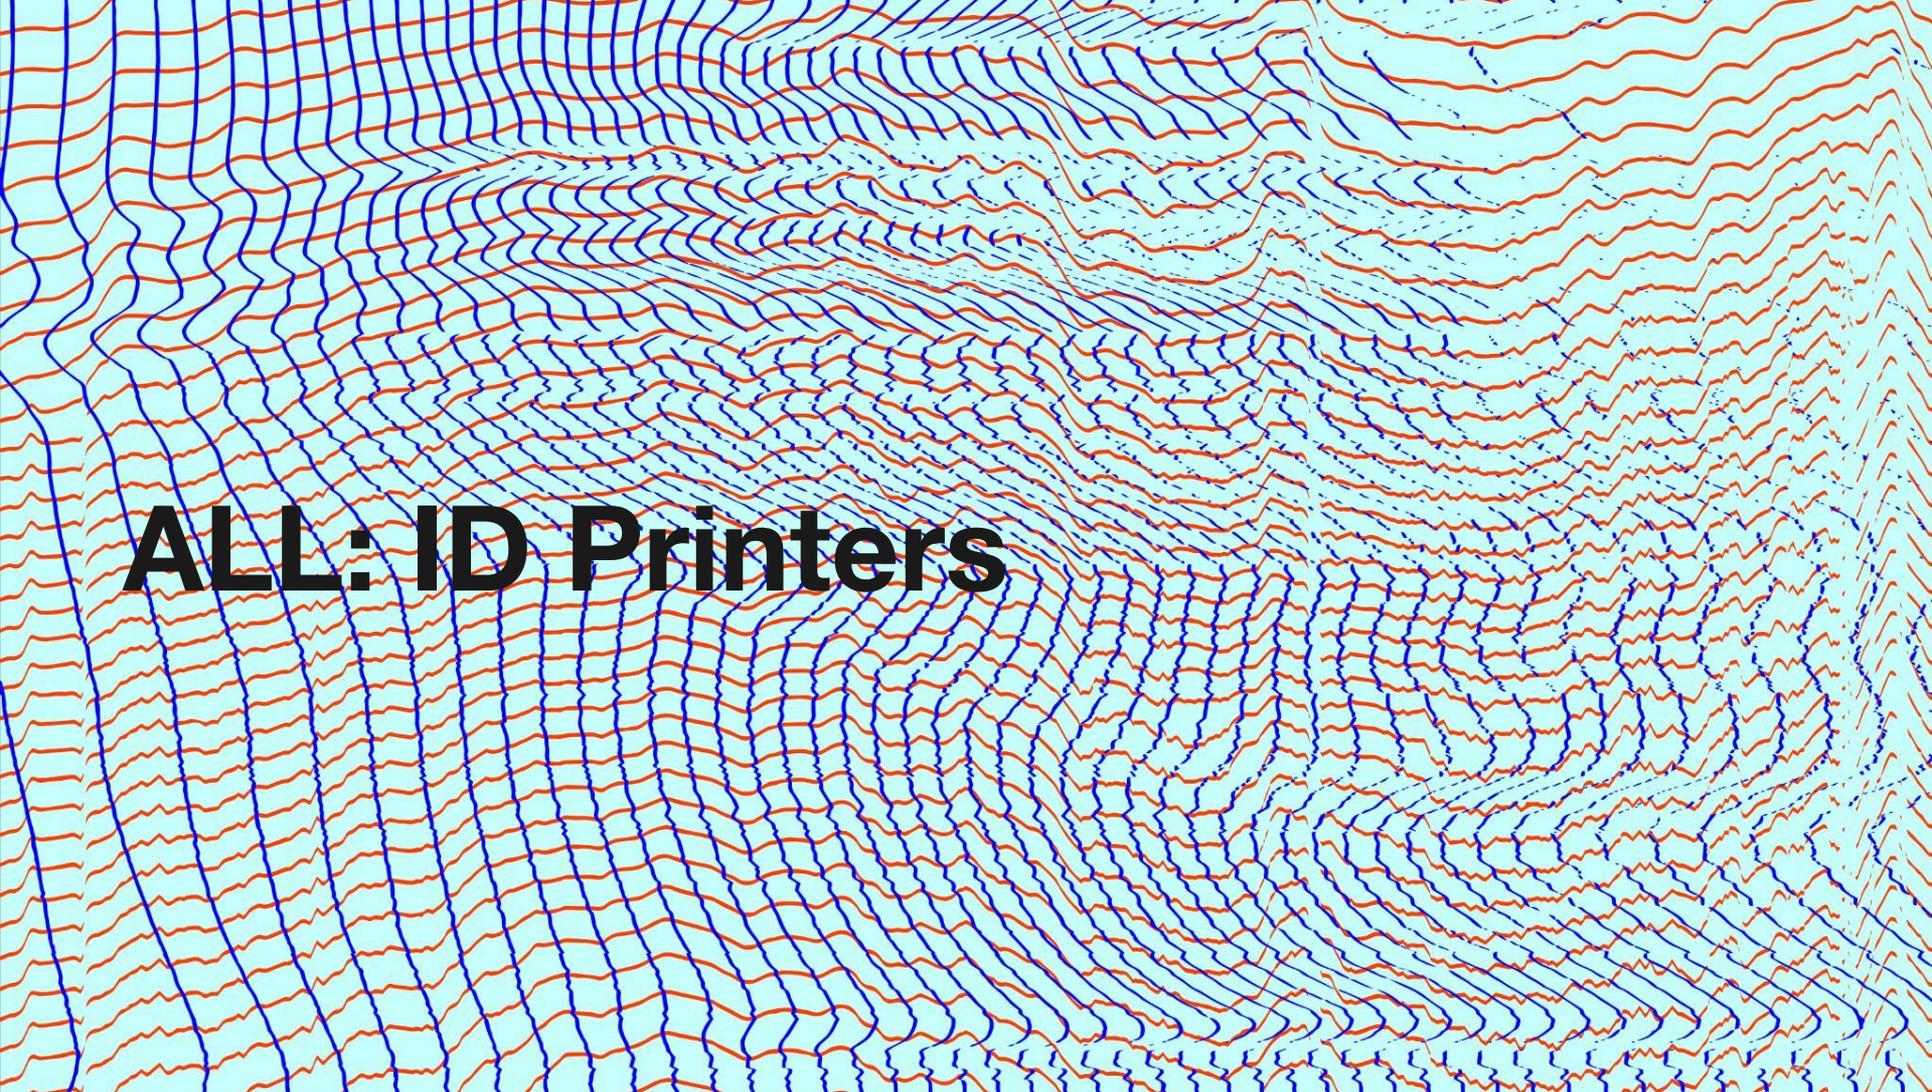The background of the image is a complex, wavy pattern of blue and orange lines, resembling a fingerprint or a topographic map. The lines are thin and closely spaced, creating a dense, textured appearance. The colors are vibrant and contrast sharply against the light background.

ALL: ID Printers

Changing ID Printer Ink



When the printer screen reads "out of film" it is time to replace the film.



Open printer by pressing top button and remove old film, both the white and blue spools.



Underneath the blue spool in the back there will be a cleaner roll. Pop this out of place as well.



Push metal spindle out from center of cleaner roll.

Changing ID Printer Ink



Discard old film and spool, but keep metal spindle. Take replacement film and spool out of the box.



Remove protective film from cleaner roll. Pull film spools apart from one another. Insert metal spindle through center of new cleaner roll.



Pop new cleaner roll into place. Make sure it clicks into place.




Insert new film. The blue spool goes in the back, left side first. Closer printer. Hit retry on the screen.

Restocking ID Printer Cards



When the printer screen says out of cards it is time to replace the cards.

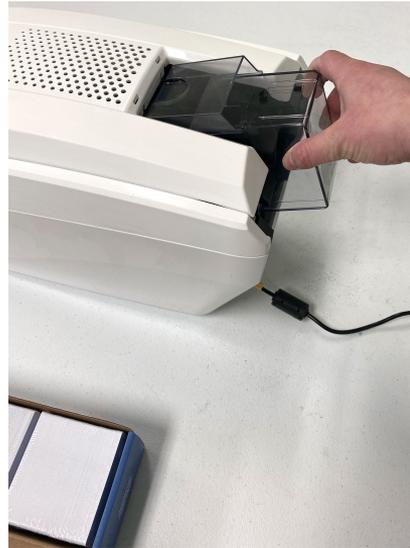

Remove the card hopper from the back of the printer.



Unwrap one pack of cards from the box and place them in the hopper. Make sure the hopper is facing up right. The hopper can only hold 100 cards at a time.




Replace hopper firmly in the back of the printer. Hit retry on the screen.


Cleaning ID Printer



The printer may prompt you to perform a cleaning cycle, but this can be done at any time if the quality of the cards is being affected.

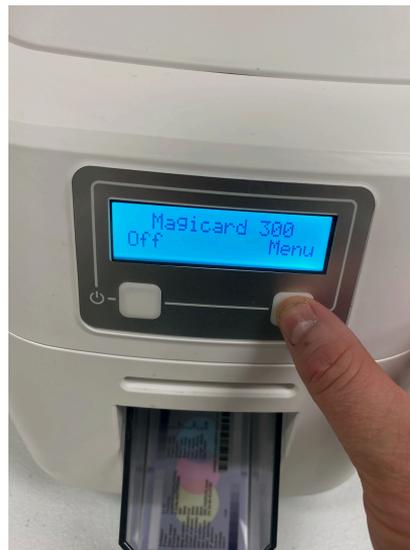

Press the menu button under the screen.

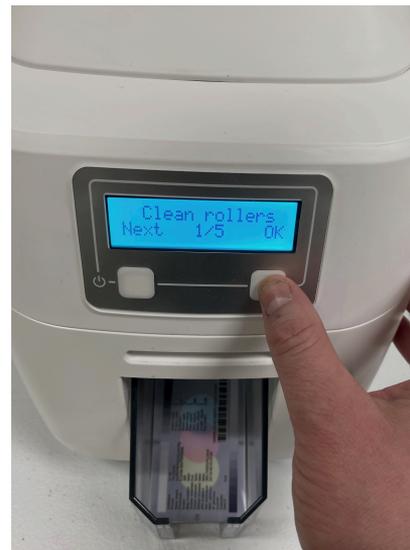

Hit next until you get to the clean rollers options. Follow the prompts on the screen to remove all cards and ink from the printer.




Open a cleaning kit. You will need one cleaning card and the print head cleaning pen.

Cleaning ID Printer



When prompted insert the cleaning card into the printer with the T side facing out.

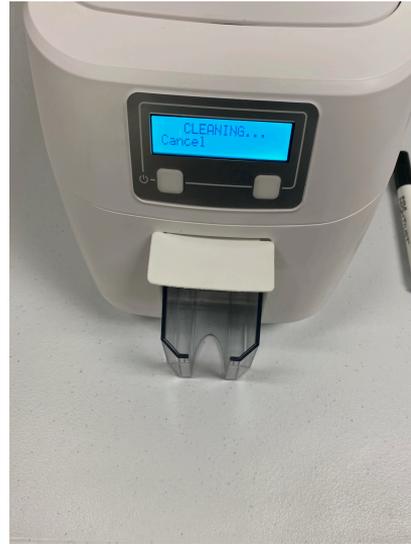

The printer will pull the card in and run a cleaning cycle.

 


Once finished you may choose to run another cycle with the same card if necessary.



Use the pen to gently remove debris from the printer head. Replace all cards and film in printer. Press retry on front screen if necessary.

THANKS!



BRDG
BRIDGE STUDIOS